


Remove shipping insert and refill gumballs

- 1 Turn globe clockwise to remove
- 2 Remove shipping insert
- 3 Separate Gumballs from wrapping
- 4 Turn globe upside down and place Gumballs inside
- 5 Reconnect globe to base, clockwise turn until locks


Play Modes

- 1 Turn machine upside down
- 2 Three modes: 'demo/off/on'
- 3 Slide switch to 'on' position to play
- 4 Return machine right side up
- 5 Press magic star button on front of machine

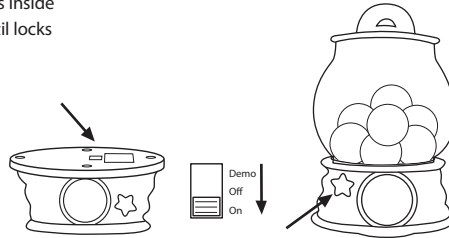

Changing Batteries

- 1 Turn machine upside down
- 2 Remove battery hatch
- 3 Replace with 3 fresh AAA batteries
- 4 Replace battery hatch
- 5 Properly dispose of old batteries

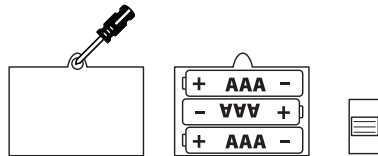

WARNING:
CHOKING HAZARD-Small parts
Not for Children Under 3 Years



331 N New Ballas Rd • PO Box 411697 • St. Louis, MO • 63141
USA • 1-800-225-9319

© 2025 Cepia LLC • PRINTED IN CHINA

Battery Information

- Always replace used batteries with fresh Alkaline batteries. Only batteries of the same type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Do not mix old batteries with new, do not mix Alkaline with standard zinc or rechargeable nickle cadmium batteries.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Exhausted batteries are to be removed from the toy.
- Do not dispose of batteries in fire.
- The supply terminals are not to be short-circuited.

CLAIM: This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING:

Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.